





 


 











## Aktivera Telia Kabel-tv

Anslut din tv till antennuttaget och gör en kanalsökning.

Kanalerna finns på:

Program	Kanal	Bildbärvåg (MHz)
SVT1 	5	175,25
SVT2 	7	189,25
TV3 	8	196,25
TV4 	9	203,25
Kanal 5 	10	210,25
TV6 	11	217,25
Kunskapskanalen 	12	224,25
TV12 	S11	231,25
MTV 	S13	245,25
TV10 	S14	252,25
Barnkanalen/SVT24  	S15	259,25
Eurosport 	S16	266,25
Discovery 	S17	273,25
TV8 	S18	280,25
Kanal 9 	S19	287,25
Sjuan 	S20	294,25
Kanal 11 	S22	311,25
V sport extra 	S27	351,25